

### Package Contents:




### Need Help?

Visit us online for up-to-date software and complete instruction manuals



- 1 Visit [flir.com/security/support](http://flir.com/security/support)
- 2 Search for the model number of your product
- 3 Click on your product in the search results
- 4 Click on the **Downloads** tab

### Connecting Your System

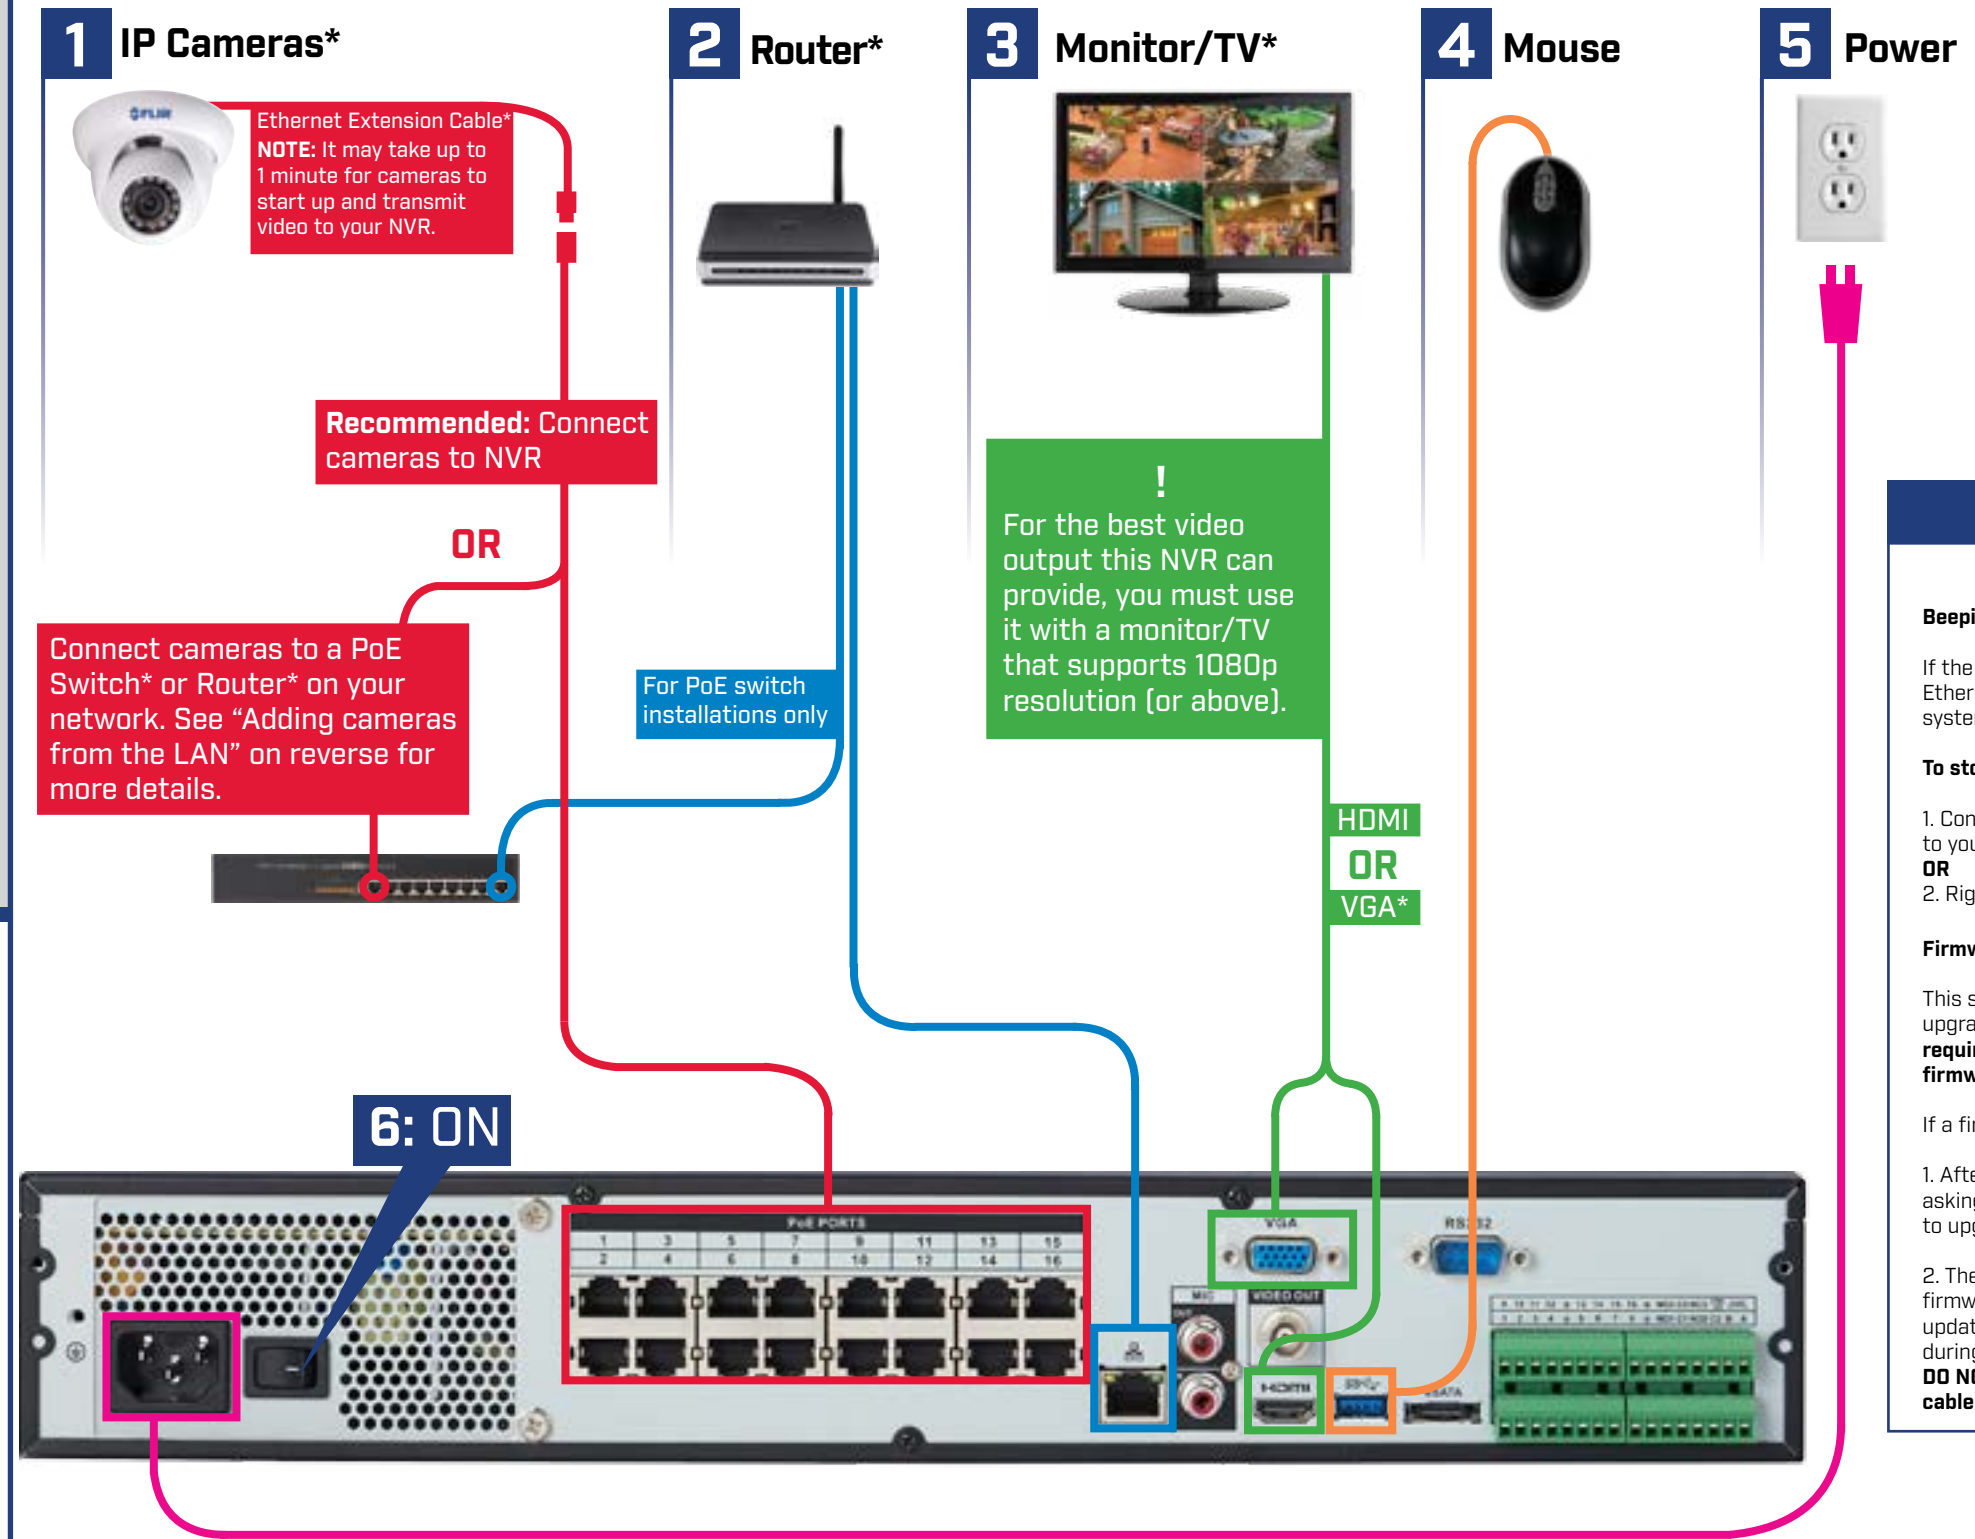

16/32 channel configuration shown. 8 channel will have the respective number of video inputs.  
 For camera compatibility information, visit [flir.com/security/support](http://flir.com/security/support)

\*Not included/sold separately.



#### Beeping

If the system is beeping after startup, the Ethernet cable may not be connected or the system may not be connected to the network.

#### To stop the beeping:

1. Connect an Ethernet cable from the system to your router.
- OR
2. Right click and click **Disable Beep**.

#### Firmware Update

This system features automatic firmware upgrades for enhanced functionality. **It is required to upgrade your system to the latest firmware version.**

If a firmware upgrade is available:

1. After startup, a notification will appear asking you to upgrade the firmware. Click **OK** to upgrade.
2. The system will download and install the firmware upgrade. Wait for the firmware update to complete. The system may restart during the firmware upgrade process. **DO NOT power off or disconnect the power cable during firmware installation.**

### Using the Mouse

#### 1. LEFT-CLICK:

- **During split-screen display mode:** Click an individual channel to view it in full-screen. Click again to return to the split-screen display mode.
- **While navigating menus:** Click to open a menu option.



#### 2. RIGHT-CLICK:

- **During live view:** Right-click anywhere on the screen to open the Quick Menu.
- **Within system menus:** Right-click to exit menus.

### Adding Cameras from the LAN

Follow the steps below to add cameras that are not directly connected to the Power over Ethernet (PoE) ports on the back of the NVR.

**NOTE:** Please visit [flir.com/security/support](http://flir.com/security/support) for a list of compatible IP cameras.

1. Connect the camera to a router or switch on the same network as the NVR.
2. Right-click and select **Remote Device**. Log in using the admin account (default User Name: **admin**; default Password: **000000**).



3. Click **Device Search**.
4. Check the camera(s) you would like to add.
5. Click **Add**. The Status indicator turns green to show the camera is successfully connected.



**NOTE:** If the Status indicator is red, click . Update the camera user name, password, ports, and manufacturer as needed.

6. Click **OK** to save changes.

### Setting the Date and Time


It is important to set the correct time to ensure accurate time stamps on video recordings.

1. In live view, right-click and click **Main Menu**.
2. Log in using the system user name (default: **admin**) and password (default: **000000**).
- 3.



Click and select **Setting**

4. Click **General** and select the **Date&Time** tab.

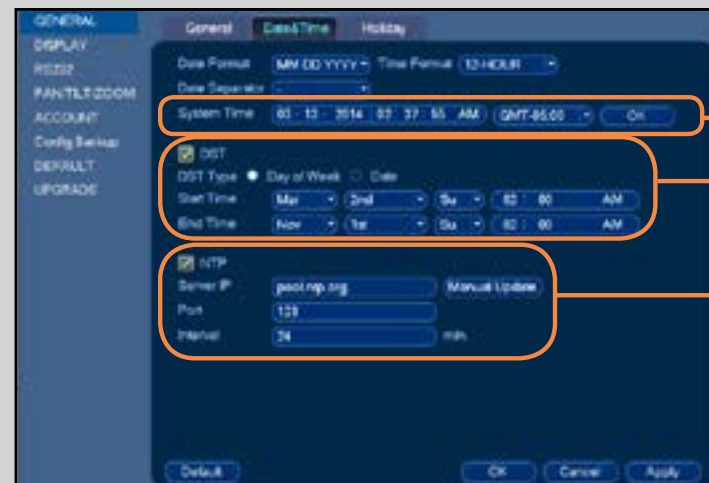

Enter the current time and select your time zone, and click **OK**.

Check **DST** to enable auto Daylight Savings Time updates.

(Optional) Check **NTP** to sync your system with an Internet time server. Click **Manual Update** to instantly update the time.

**NOTE:** A constant Internet connection is required to use NTP.

5. Click **Apply** to save changes.

### Using the Quick Menu

Right-click to open the Quick Menu.



Select camera/live display view

Control PTZ cameras (not included)

Control Fish Eye cameras (not included)

Control auto focus cameras (not included)

Adjust camera color and image settings

View system information

Start/stop sequence mode

Disable current audible warning

Search and playback recordings


Open manual recording controls

Add IP cameras over the LAN

Open Main Menu

### Playback and Search

1. From live view, right-click and then click **Search**.
2. Log in using the system user name (default: **admin**) and password (default: **000000**).
3. Use the calendar on the right to select the date to playback.
4. Use the drop-down menus to select the channels you would like to playback. Click the display options ( ) to playback multiple channels simultaneously.
5. Click inside the video bar to select the playback time. Playback starts immediately at the selected time.

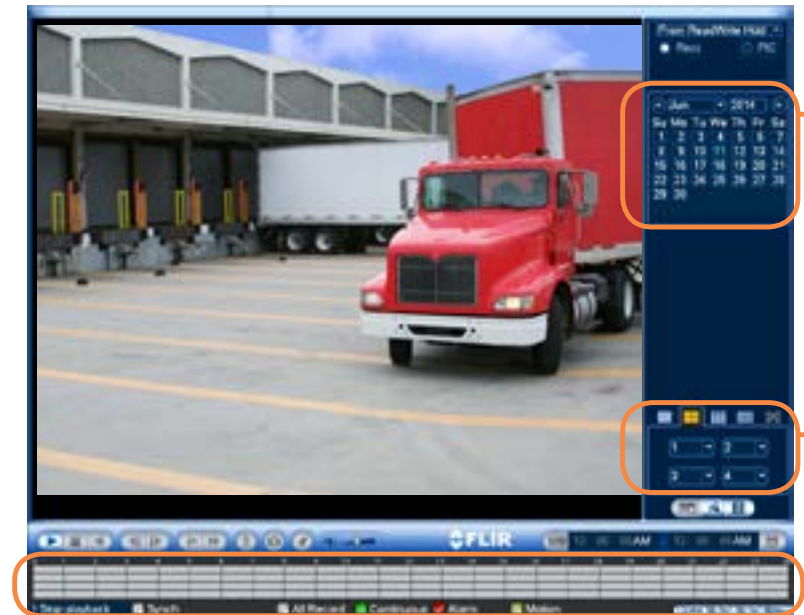

Select the day to playback.

Select channels to playback.

Click inside the bar to select a playback time.